

**Things are  
about to  
get better.**

**fios**<sup>v</sup>  
by verizon



## Better control. Fios® TV

Prepare to be blown away with sharp, high-definition picture quality that'll make you think you have a brand-new set. Watch TV, access thousands of On Demand movies and shows and manage settings like Parental Controls. One remote lets you do it all. Learn how to use your TV features, tune to Channel 131.

### Menu

Launches the Main Menu, where you can access TV features

### Exit

Returns to TV watching

### Widgets

Provides access to weather, traffic, social networking and more

### On Demand

Navigates to movies and shows that are available for viewing

### Input button

Toggles through TV inputs like HDMI 1, HDMI 2 and Video 1

### Guide

Displays a list of TV programs

### Info

Provides information about the show being viewed

### Favorites

Displays your favorite channel listings

### DVR

Displays and manages recorded shows


### B button

Quickly search for your favorite shows

### C button

Switches channels when watching live from SD to HD (if available)



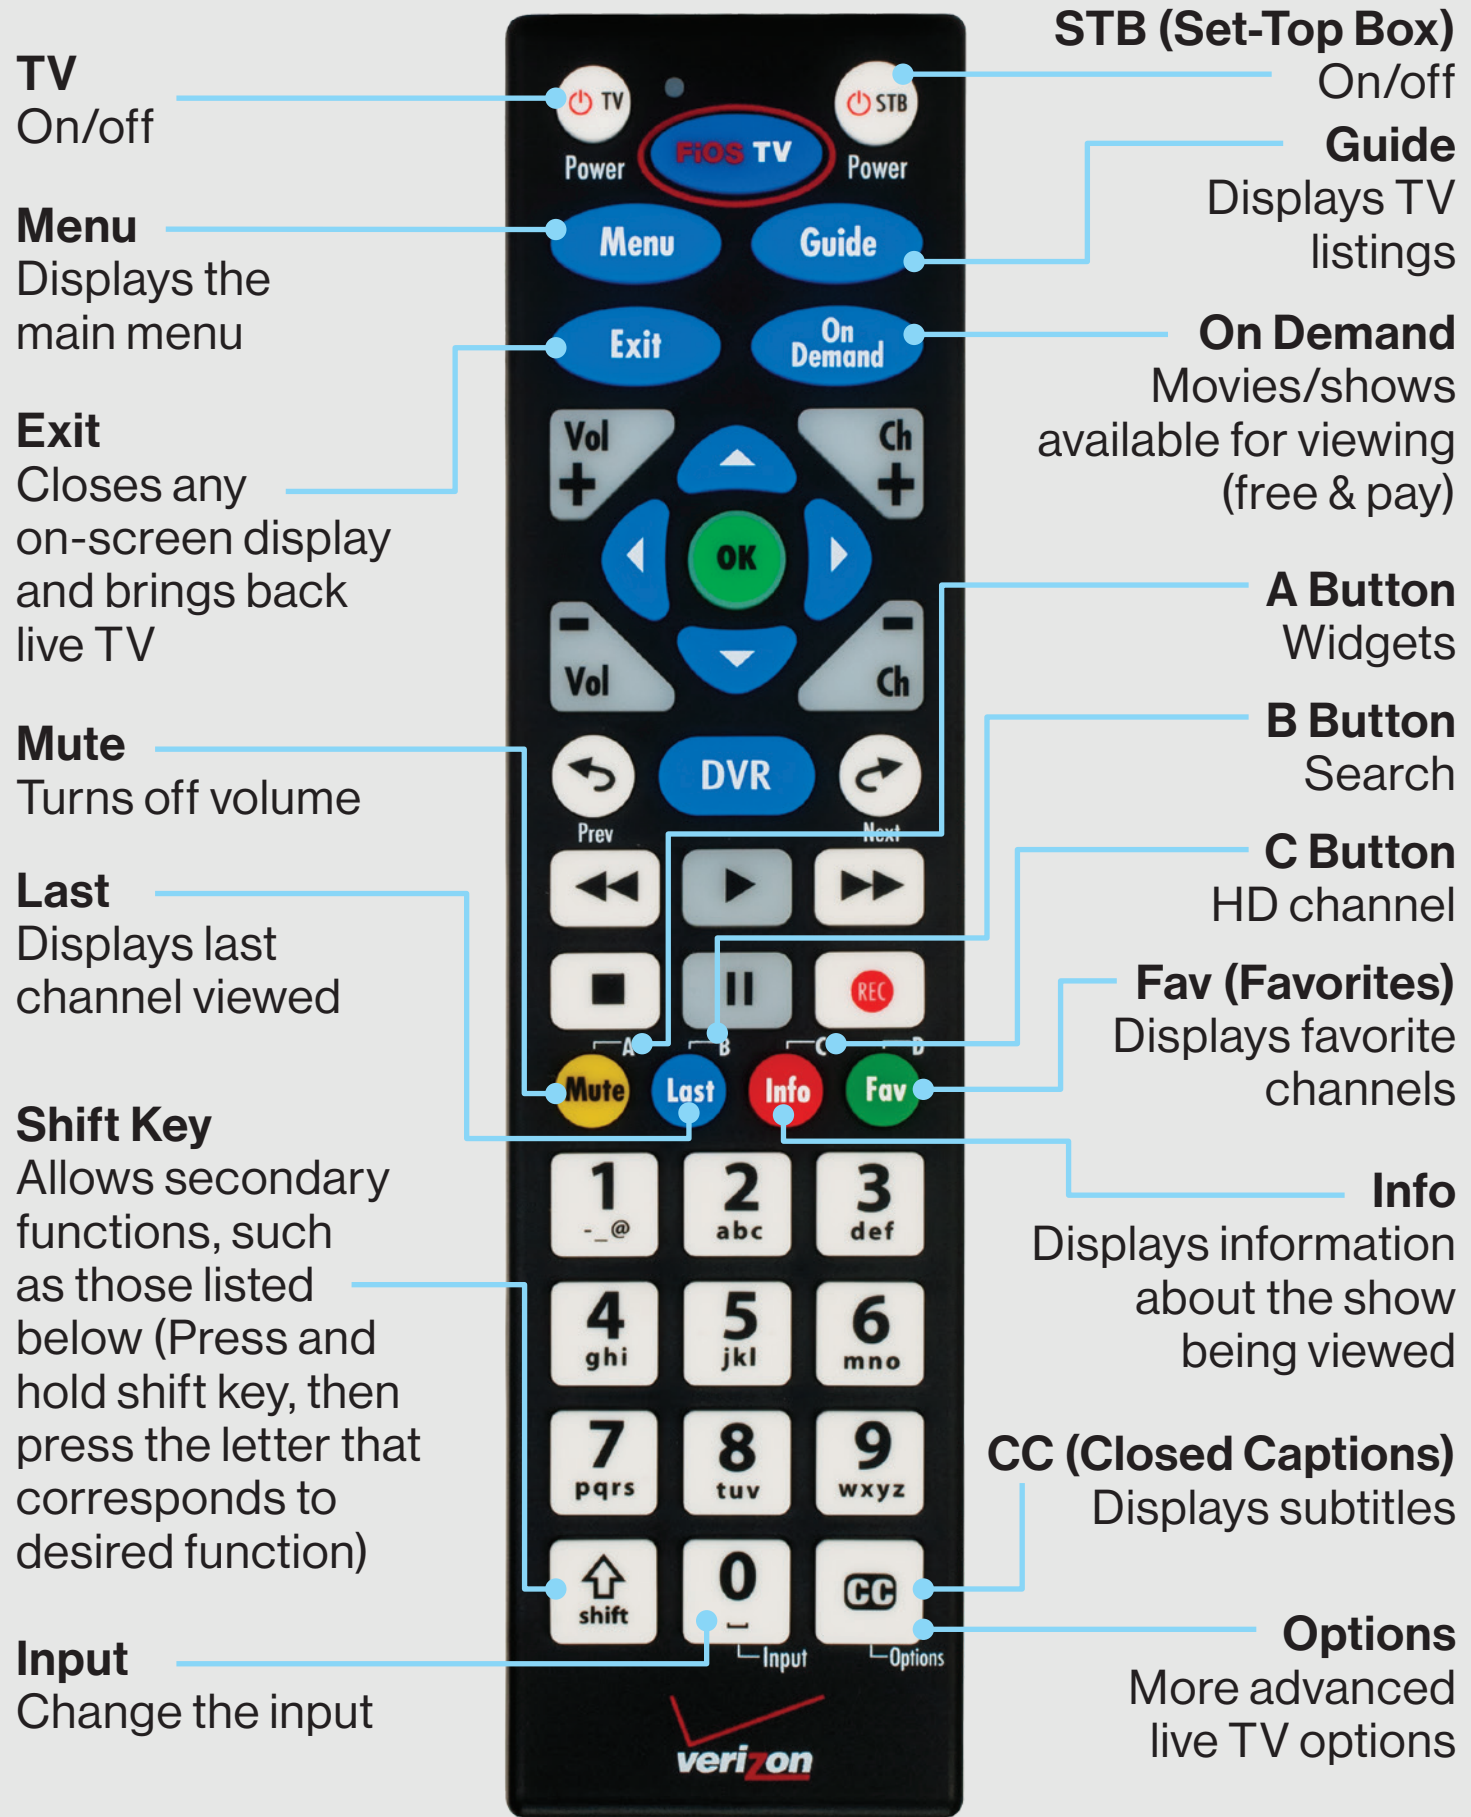

**Better is bigger.**  
Fios TV Big Button Remote

Please see the following pages for instructions on some of the most popular TV functions like recording a show and using On Demand.

Big Button Remotes are available if needed. Visit [verizon.com/AccessibleMaterials](http://verizon.com/AccessibleMaterials) to place an order.



## Better functions.

**Big Button Remote  
additional functions.**

### Recording a Show

- Press the **Guide** button
- Select show to record
- Press the **REC** button once to record the show
- Press **REC** a second time to record a series
- Follow prompts to record or modify the series, then press the **OK** button

### Using On Demand (free movies and TV shows available)

- Press the **On Demand** button
- Use the blue arrow buttons to search through available programs
- When you find a program you want to watch, press **OK**

### Setting Favorites

- Press the **Menu** button
- Scroll to **Settings > System > Favorite Channels**
- Choose **Favorites 1** or **Favorites 2**
- Go to **Add** or **Remove Channels**
- Scroll through the channels, press **OK** to add a Favorite channel (or simply enter the channel number)
- A heart will be displayed next to the channel when it's successfully entered
- Press the **Exit** button to get back to live TV

### Changing TV Input

- Press and hold the **Shift** button and press the **0** button at the same time
- Inputs will be displayed (For example HDMI 1, HDMI 2, Video 1, Video 2, etc)
- While still holding the **Shift** button, press **0** until the desired input is highlighted
- Release both buttons and the input will be changed

# Do more. Better.

## Fios apps and support

Want help with your Fios phone, TV or High Speed Internet service? Get the answers you need, fast. Just visit us online or press the **Menu** button on your TV remote. Scroll to **Customer Support**, then select your topic.



Set up Guest Wi-Fi Access, manage your DVR, watch TV on the go and more. Verizon apps give you more possibilities than ever before.

For more details, go to [verizon.com/Apps](http://verizon.com/Apps) or visit us at your app store.



Tune to Channel 131 on your TV for how-to videos and setup wizards.



Visit [WelcomeToFios.verizon.com](http://WelcomeToFios.verizon.com) for tutorials, advanced features and ways to optimize your experience.