
ERICSSON ENTERPRISE WIRELESS
DOCUMENTATION PORTAL

R1900 Series Router Quick Start Guide

10/21/2025

This PDF Book is current as of the download date. Please check docs.cradlepoint.com to ensure you have the most recent version of this content.

1. Introduction

1.1. Intended Audience

2. R1900 Series Router Models

3. Before You Begin

3.1. Location Considerations

3.2. SIM Card for Wireless Connectivity

3.3. Router Communication and Data Usage

3.4. Required Tools for Setup

4. Setup

4.1. STEP 1: Check box for contents.

4.2. STEP 2: Remove the SIM door.

4.3. STEP 3: Insert an activated 4FF-sized SIM into the router.

4.4. STEP 4: Reinstall the SIM door.

4.5. STEP 5 (OPTIONAL): Connect to an RX30 Series managed accessory.

4.6. STEP 6: Attach the antennas.

4.7. STEP 7: Mount the router.

4.8. STEP 8 (Optional): Connect the Ethernet cable.

4.9. STEP 9: Power up the router.

4.10. STEP 10: Activate the router through NetCloud Manager.

5. Understanding LEDs

6. Troubleshooting


7. Help and Support

8. Terms of Service

9. Cradlepoint Product Disclaimer and Limitation of Liability

1 | Introduction

This document provides a brief overview of the R1900 Series router, discusses what's inside the box, and provides basic setup and install instructions for the router.

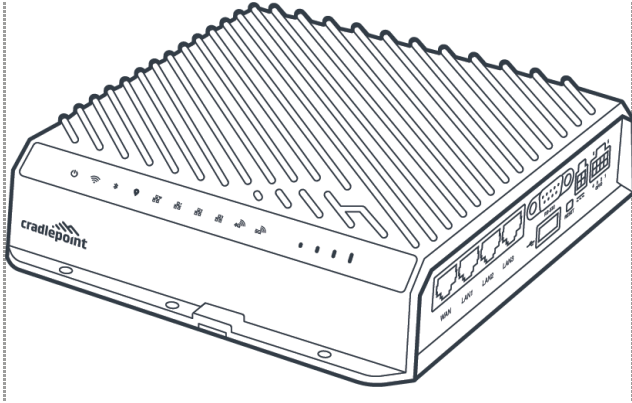

If you find information in this guide that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

NOTE: The Verify app includes many of the same instructions with an alternate order. This document supports the Verify app instructions. Use the Navigation section below to locate the topics most applicable to troubleshooting your setup issues. For additional setup support, see the [Contact us](#) page.

1.1 | Intended Audience

This article is intended for professional networking hardware installers. It provides basic knowledge and should be used only as a reference guide for installing the R1900 Series router. Due to the unique nature of each installation, potential for RF exposure, and enhanced separation requirements, customers must have a professional install their 5G hardware. This document is a reference guide and is intended only to provide best practices.

Refer to the [Cradlepoint Product Disclaimer and Limitation of Liability](#) section for further information.

2 | R1900 Series Router Models

This document applies to the following R1900 series models:

R1900-5GB MODEL: S5A052A

3 | Before You Begin

Read through the following before you set up your R1900 series router.

3.1 | Location Considerations

The R1900 is built for installation in a variety of environments. Cradlepoint recommends having a professional install the R1900 router to ensure proper signal reception and usage. The following are best practices for determining the location for the installation:

- Ensure that the mounting surface is flat and clear of any obstructions or objects that may interfere with the antennas, signal reception, or cables.
- Position the device for optimal cellular and Wi-Fi signal reception.
- Avoid mounting in direct sunlight or in locations where it may be exposed to the weather.
- Ensure plenty of airflow for ventilation.
- Keep the device out of reach. It is required that the endpoint be installed behind a locked/gated enclosure to restrict unauthorized access. The R1900 is designed to work in elevated ambient temperatures which may cause the surface of the device to become too hot to safely touch.
- Mount in locations compliant with the Safety, Regulatory, and Warranty guide, included in the product shipping box.

For mobile installations, refer to the [Cradlepoint IBR900 & IBR1700 Mobile Router Vehicle Installation Guide](#) for more information.

IMPORTANT: The R1900 Series router requires increased separation distances between the Cradlepoint hardware and human beings. The recommended minimum separation distance is listed on the Safety, Regulatory, and Warranty guide included in the shipping box. Therefore, Cradlepoint requires that all 5G adapters be installed by a professional. For assistance with installation or in locating a professional installer, contact [Cradlepoint Sales and Support](#).

3.2 | SIM Card for Wireless Connectivity

A wireless broadband data plan must be added to your Cradlepoint R1900 for wireless broadband connectivity. The SIM must be provisioned by the carrier. Contact your carrier for details about selecting a data plan and about the process for provisioning your SIM. To configure the router for failover and failback functionality, refer to the article, [NCOS: Effectively utilizing 2-SIM modems](#).

3.3 | Router Communication and Data Usage

The factory default configuration of the router is set to communicate with Cradlepoint and other resources at regular intervals to access the latest NetCloud OS and modem updates, clock synchronization (NTP), and NetCloud Manager. Such communication may result in data usage and applicable charges regardless of whether the router uses a wired or wireless Internet connect. To avoid such data usage and potential charges, see [Router Communication/Data Usage](#) for more information.

3.4 | Required Tools for Setup

Cradlepoint recommends that a professional install the R1900 in any environment. However, the following tools may be necessary for setup.

- #0 Philips-head screwdriver (for SIM cover screws)
- #2 Philips-head screwdriver (for mounting screws)
- Mounting tools - Depending on the location of installation, additional mounting tools may be necessary. These tools may include, but are not limited to:
 - Screwdrivers
 - Drill and drill bits
 - Additional screws
 - Zip ties

4 | Setup

Refer to the following for general setup instructions.

4.1 | STEP 1: Check box for contents.

Prior to having the R1900 router installed, open the box and ensure that all items are present. You should have received the following:

R1900 Series Router Quick Start Guide

- [1] R1900 series router
- [1] 3-meter (2x2) Power and GPIO cable
- [4] M4 screws, nuts, and washers
- [1] Mounting template
- [1] Quick Start Reference sheet
- [1] Safety, Warranty, and Regulatory guide

R1900 Accessories


To optimize the R1900 series router for Wireless WAN or with failover configuration, you will need at least one activated 4FF-sized SIM card, with an active cellular data plan.

Additional accessories to enhance your router capabilities include, but are not limited to:

- Vehicle Telemetry cable
- RX30 Series managed accessory
- Antennas
 - Refer to the [Cradlepoint Antenna](#) webpage for assistance in locating a Cradlepoint Approved vendor.

4.2 | STEP 2: Remove the SIM door.


Unscrew and remove the SIM cover from the router.

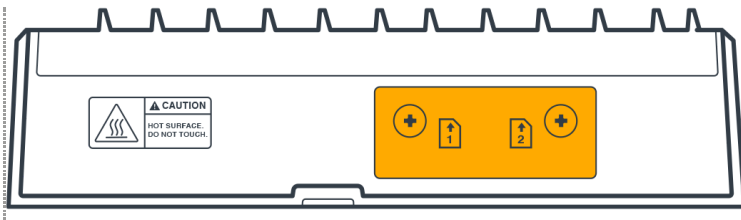

4.3 | STEP 3: Insert an activated 4FF-sized SIM into the router.


R1900 Series Router Quick Start Guide

- Insert an activated 4FF SIM card into the SIM1 slot (contacts down, notch in). The SIM card will click into place.
- Optionally, insert an active 4FF SIM into the SIM2 slot with the same orientation.

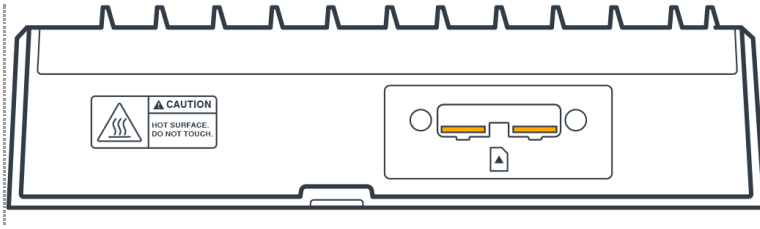


4.4 | STEP 4: Reinstall the SIM door.

Replace the SIM cover and secure with the SIM door screws.

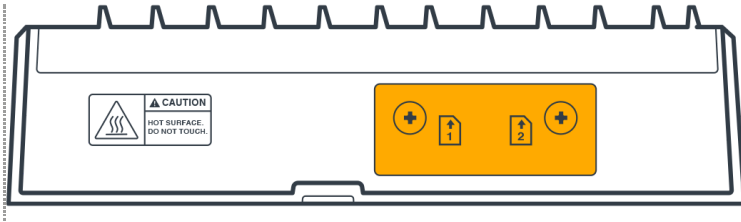

4.5 | STEP 5 (OPTIONAL): Connect to an RX30 Series managed accessory.


Refer to the installation instructions detailed in the RX30 Series Quick Start Guide and then continue to the next step when the managed accessory is attached.

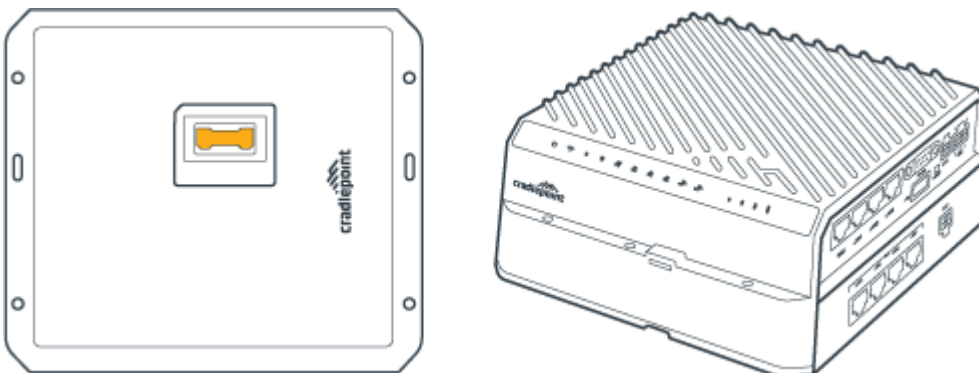

4.6 | STEP 6: Attach the antennas.

The R1900 series router does not include antennas. Antennas must be purchased separately or through a third-party vendor. Refer to the [Cradlepoint Antenna](#) webpage for more information and options.

NOTE: All antenna interfaces require cabled out external antennas and are not compatible with direct-attached antennas.

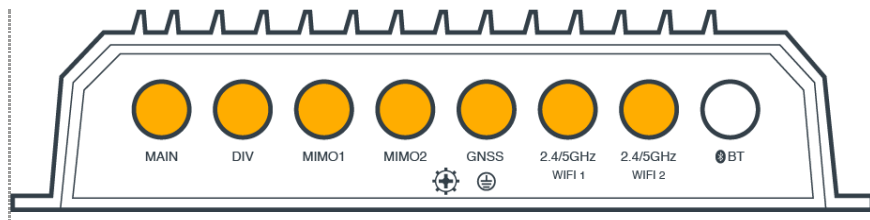

Refer to the [Vehicle Installation Guide for Mobile Routers](#) for antenna setup best practices.


4.7 | STEP 7: Mount the router.

The R1900 series router may be mounted in a number of ways and should be completed by a professional installer. Refer to the following for best practices:

- Mark the desired mounting location on the ceiling, wall, kiosk, or vehicle using a pen or marker.
- Ensure the mounting location is away from RF interfering materials and objects such as reflective surfaces, brick and concrete, microwaves, and so on.
- Pre-drill holes for the mounting screws.
- Use anchors and other screw-securing accessories to ensure the device is securely mounted in place.
- Refer to the Location Considerations section of this document.


4.8 | STEP 8 (Optional): Connect the Ethernet cable.

- If you are using a wired, Ethernet WAN connection, connect the Ethernet cable to the WAN port on the back of the R1900. Connect the other end to your WAN source.
- If you are using a wireless WAN (using cellular connectivity), you will need to power up the router first, access your NetCloud Manager account, and then complete the setup.

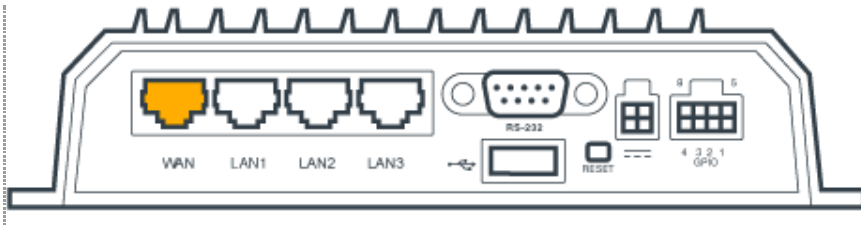


4.9 | STEP 9: Power up the router.

The 4-pin GPIO cable is configured to allow for using a 4-wire/GPIO cable to hardwire power for DC connections, or for using GPIO. Refer to the following for pin configuration:

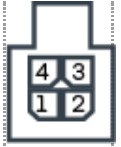	PIN	Wire Color	Definition	Details
	1	Black	Ground	Ground to the vehicle chassis
	2	Red	Power	VDC battery constant
	3	Orange	Input	VDC ignition sensing accessory input
	4	Blue	Output	General purpose I/O (GPIO)

- Insert the 4-pin end of the power adapter into the 4-pin port on the router, ensuring appropriate alignment of pins as illustrated above.
- Connect the wires on the other end to the appropriate fuse or power source.
- Allow 1 minute for the router to run through its bootup sequence.

The 8-pin GPIO socket is configured to allow for using an 8-wire/GPIO cable. This connector provides extensibility and the ability to connect a redundant power supply. Refer to the following for pin configuration:

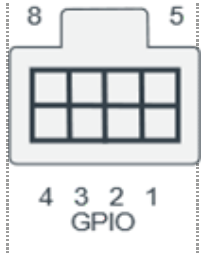


	PIN	Wire Color	Definition	Details
	1	Black	Ground	Ground to the vehicle chassis
	2	Brown	Analog Input	0-5 V/0-36 V
	3	Red	Power	Redundant power supply
	4	Black	Ground	Ground to the vehicle chassis
	5	White	GPIO3	LVTTL compatible, protected to 36 VDC input
	6	Blue	GPIO2	LVTTL compatible, protected to 36 VDC input
	7	Yellow	GPIO1	LVTTL compatible, protected to 36 VDC input
	8	Orange	Ignition Sense	Provides option to power up on vehicle ignition



4.10 | STEP 10: Activate the router through NetCloud Manager.

Activate your router through NetCloud Manager (NCM). Your router is packaged with NetCloud services and requires that you log into your NetCloud account to activate. See [Getting Started with NetCloud Manager](#) for more information.

5 | Understanding LEDs

Refer to the following table for information about LED indicators.

Status Indicator	Behavior
POWER	<p>The R1900 must be powered using an approved 9-36 V DC power source.</p>
	<p>No Light = Not receiving power. Check the power switch and source connection.</p>
	<p>Green = Powered ON.</p>
	<p>Yellow = Attention. Log into NCM and use the Remote Connect menu to access the router's NCOS to manage any alert.</p>
<p>SIGNAL STRENGTH</p>	<p>LED bars indicate the modem's signal strength.</p>

	<p>4 Solid Bars = Strongest signal</p>
	<p>1 Blinking Bar = Weakest signal (A blinking bar indicates half of a bar)</p>

4G LTE
EMBEDDED
MODEM



4 Blinking Bars = SIM door is not installed, modem is off



Sequence Flashing (1st bar, 2nd bar, 3rd bar, 4th bar, repeat) = Two possible causes:

User is holding the reset button (counts up to 10) Router is booting up (counts up to four)

Indicates information about the embedded 4G LTE modem.



No Light = Modem not connected.

NOTE: You will not be able to see the icon when the modem is not connected.



Solid Green = Modem has established an active WAN connection.



Flashing Green = Modem is connecting.



Solid Yellow = Modem is not active.



Flashing Yellow = Data connection error. No modem connection possible.



Flashing Red = Modem is in the process of resetting.

NOTE: Blinking Red with Signal Strength LEDs = SIM door is not installed, modem is off.

5G
CONNECTION

Indicates 5G WAN connectivity.



No Light = No 5G connection.



Flashing Green = Modem has established an active LTE connection and the connected cell supports 5G NSA.



Solid Green = Modem has established an active WAN Connection.

Wi-Fi
BROADCAST

Indicates activity on the Wi-Fi broadcast for both 2.4 and 5 GHz bands.



No Light = Wi-Fi is not operating.



Blue = Wi-Fi is on and operating normally

LAN ACTIVITY

Indicates an active LAN connection.


NOTE: Only one LAN connection will be active at a time.



No Light = LAN is not connected or is not currently active.



Flashing Green = Active LAN connection.

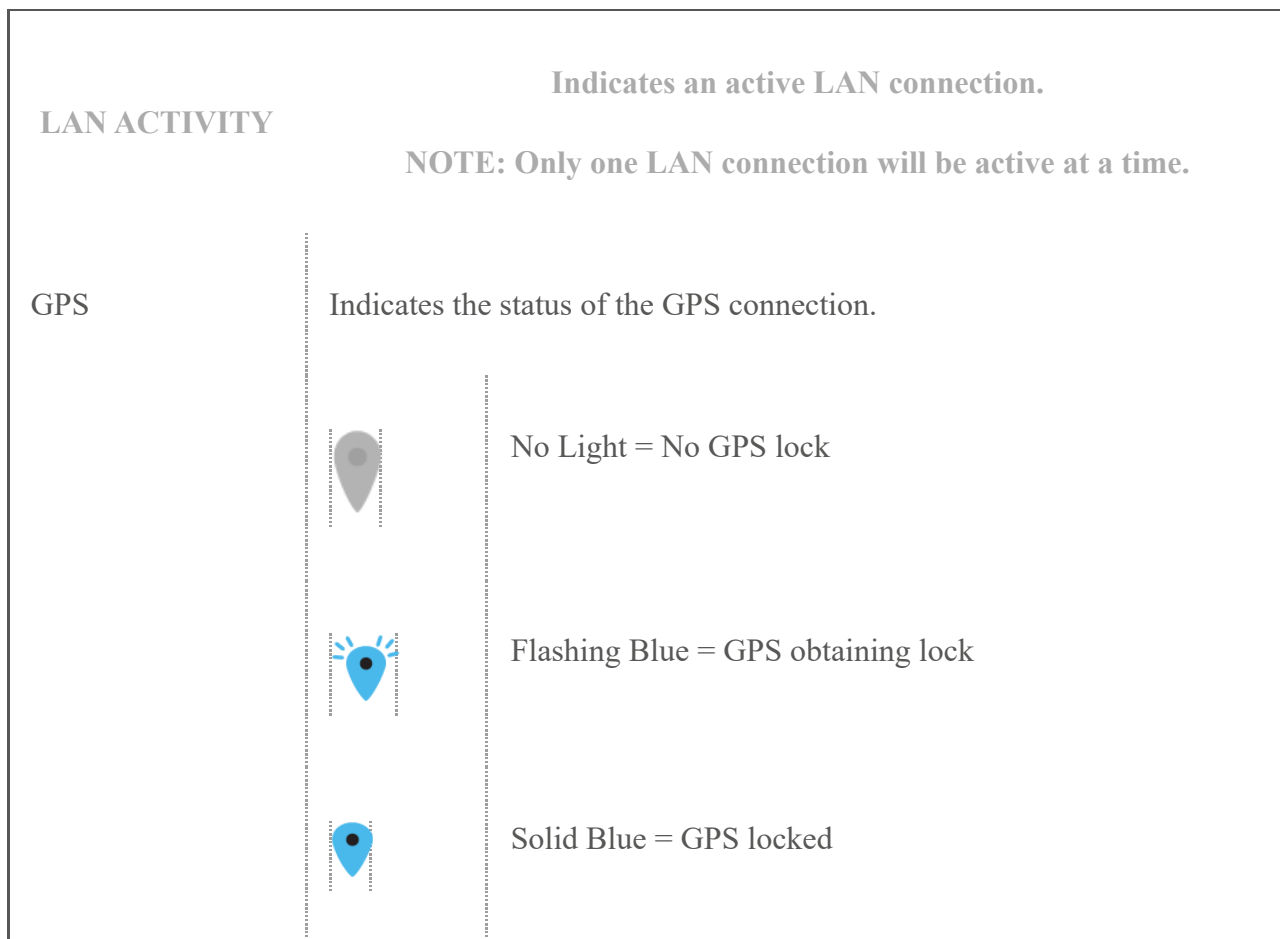

6 | Troubleshooting

If the device takes longer than 5 minutes to connect to the Internet, you may need to log into the local UI of the device to make configuration changes or start the troubleshooting process. You must be physically co-located with the device to do this. If there is no Internet connection, refer to the following:

- [No Internet or Connection Issues](#)
- [NCOS: How to Configure WAN Interfaces](#)

Once the device connects to the Internet, ensure that desired functionality is working appropriately through NCM.

- [Customer Support](#)
- [Customer Community](#)

7 | Help and Support

- [Customer Connect Community](#)
- [Support Services](#)

8 | Terms of Service

- [Terms of Service](#)
- [Privacy Policy](#)
- [GDPR Privacy Policy](#)

9 | Cradlepoint Product Disclaimer and Limitation of Liability

Disclaimer

Cradlepoint, Inc. (“Cradlepoint”) does not warrant that the hardware will work properly in all environments or applications, and makes no warranty or representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose of the R1900 Series router even when installed in accordance with this Professional Installation Guide.

This Professional Installation Guide is provided “AS IS,” without any warranty of any kind. Without limiting the foregoing, to the maximum extent permitted by applicable law Cradlepoint expressly disclaims all representations, warranties and conditions, whether express, implied, statutory, or otherwise, with respect to this Professional Installation Guide, including without limitation any warranty of title, non-infringement, merchantability or fitness for a particular purpose. While Cradlepoint has made every effort to ensure this Professional Installation Guide is accurate, Cradlepoint disclaims liability for any inaccuracies or omissions that may have occurred and shall not be liable for any adverse results caused, in whole or in part, by the installer’s reliance upon the instructions in this Professional Installation Guide. Information in this Professional Installation Guide is subject to change without notice and does not represent a commitment on the part of Cradlepoint. Cradlepoint assumes no responsibility for any inaccuracies that may be contained in this Professional Installation Guide. Cradlepoint makes no commitment to update or keep current the information in this Professional Installation Guide and reserves the right to make

improvements to this Professional Installation Guide and/or to the products described in this Professional Installation Guide, at any time without notice.

Installer Responsibility

Cradlepoint hereby disclaims any liability for failure of the installer to install the hardware properly and for any other acts and omissions of the installer. By using this Professional Installation Guide, you agree to indemnify and hold Cradlepoint harmless from and against any and all, liabilities, losses, damages, costs and expenses (including without limitation attorneys' fees and costs) incurred by Cradlepoint arising out of or in connection with any installation work that is done other than in accordance with the instructions in this Professional Installation Guide.

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL CRADLEPOINT BE LIABLE TO YOU OR TO ANYONE CLAIMING THROUGH OR UNDER YOU FOR ANY LOST PROFITS, EQUIPMENT DOWNTIME, OR LOSS OF DATA OR BUSINESS OPPORTUNITY, OR FOR ANY INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, HOWEVER CAUSED AND UNDER ANY THEORY OF LIABILITY, ARISING IN ANY WAY IN CONNECTION WITH YOUR INSTALLATION ACTIVITIES, EVEN IF CRADLEPOINT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. SOME JURISDICTIONS (SUCH AS THE STATE OF NEW JERSEY) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN NO EVENT SHALL THE AGGREGATE LIABILITY OF CRADLEPOINT AND/OR ITS AFFILIATES ARISING UNDER OR IN CONNECTION WITH THE PRODUCT, HOWEVER ARISING, REGARDLESS OF THE NUMBER OF EVENTS, OCCURRENCES, OR CLAIMS GIVING RISE TO LIABILITY, EXCEED THE PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT. IN NO EVENT SHALL THE AGGREGATE LIABILITY OF CRADLEPOINT AND/OR ITS AFFILIATES ARISING UNDER OR IN CONNECTION WITH THE PRODUCT, HOWEVER ARISING, REGARDLESS OF THE NUMBER OF EVENTS, OCCURRENCES, OR CLAIMS GIVING RISE TO LIABILITY, EXCEED THE

PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.